

# IGNITION SYSTEM

## ON-VEHICLE INSPECTION

IGOK5-04

**NOTICE:**

"Cold" and "Hot" in these sentences express the temperature of the coils themselves. "Cold" is from -10 °C (14 °F) to 50 °C (122 °F) and "Hot" is from 50 °C (122 °F) to 100 °C (212 °F).

**1. INSPECT IGNITER AND SPARK TEST**


Check that the spark occurs.

- (1) Remove the ignition coil (See page [IG-7](#)).
- (2) Using a 16 mm plug wrench, remove the spark plug.
- (3) Install the spark plug to the ignition coil, and connect the ignition coil connector.
- (4) Ground the spark plug.
- (5) Check if spark occurs while engine is being cranked.



**NOTICE:**

To prevent excess fuel being injected from the injectors during this test, do not crank the engine for more 5 - 10 seconds at a time.

If the spark does not occur, do the test as follows:

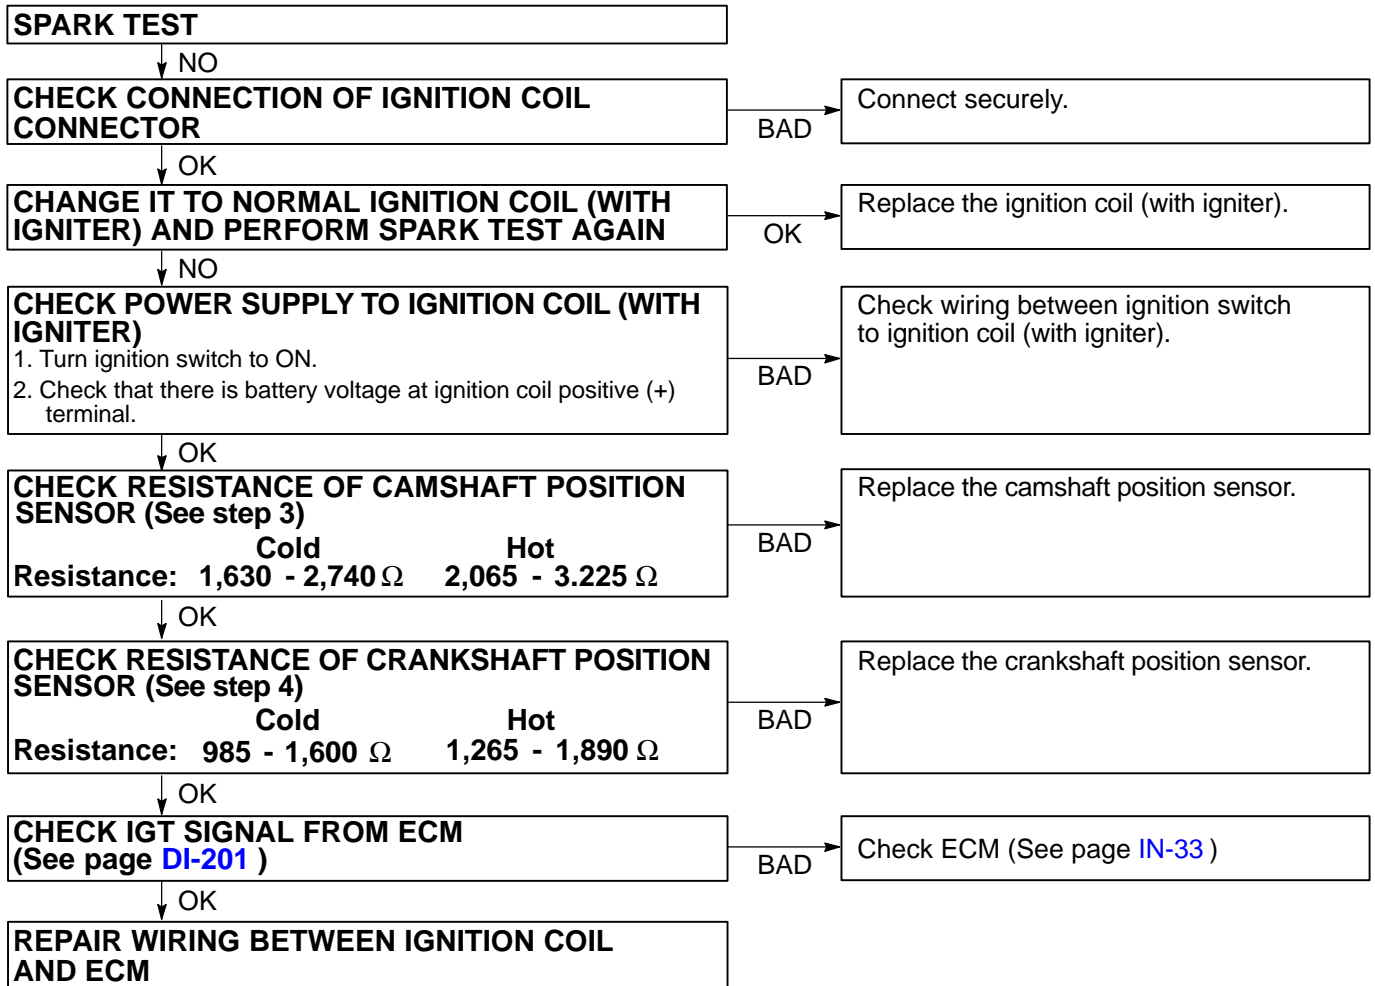

- (6) Using a 16 mm plug wrench, reinstall the spark plug.  
**Torque: 18 N·m (180 kgf·cm, 13 ft·lbf)**
- (7) Reinstall the ignition coil (See page [IG-9](#)).

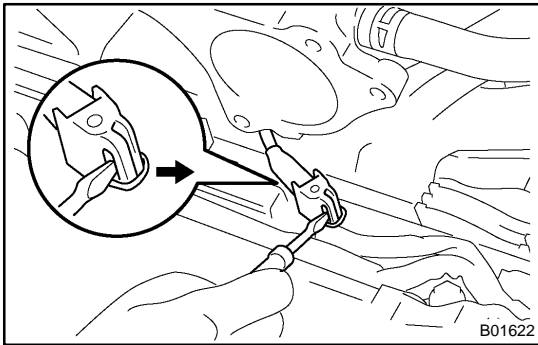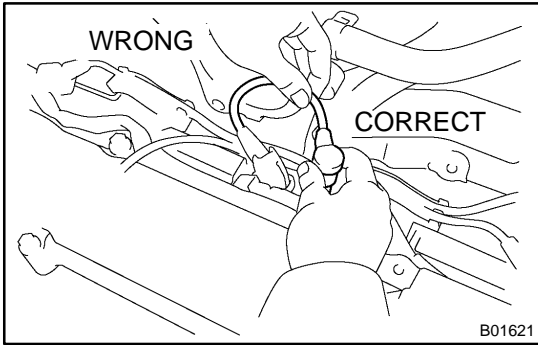

**2. INSPECT HIGH-TENSION CORDS**

- (a) Remove the No.3 timing belt cover.
- (b) Remove the throttle body gasket (See page IG-7 ).
- (c) Disconnect the high-tension cord set from the spark plugs.  
Disconnect the high-tension cords at the rubber boot. DO NOT pull on the cords.


**NOTICE:**

**Pulling on or bending the cords may damage the conductor inside.**

- (d) Disconnect the high-tension cord set from the ignition coils.
  - (1) Using a screwdriver, lift up the lock claw and disconnect the holder from the ignition coils.
  - (2) Disconnect the high-tension cord at the grommet. DO NOT pull on the cord.

**NOTICE:**


- Pulling on or bending the cords may damage the conductor inside.
- Do not wipe any of the oil from the grommet after the high-tension cord is disconnected.

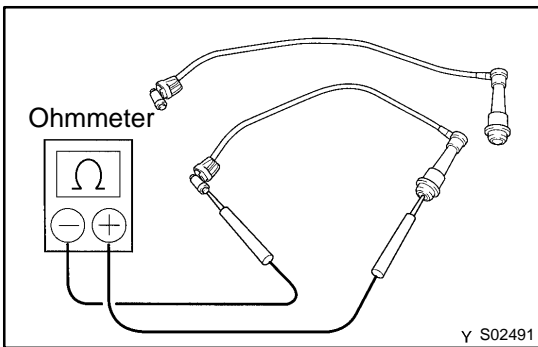


- (e) Using an ohmmeter, measure the resistance.

**Maximum resistance: 25 kΩ per cord**

If the resistance is greater than the maximum, check the terminals. If necessary, replace the high-tension cord.

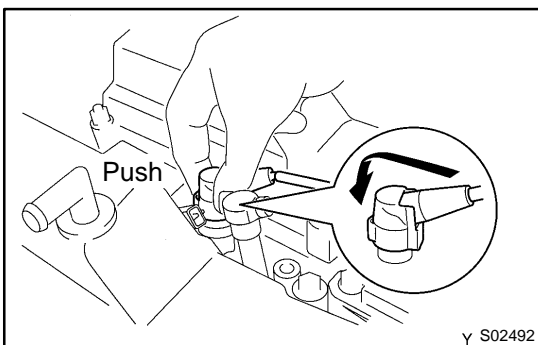

- (f) Reconnect the high-tension cord set to the ignition coils.
  - (1) Assemble the holder and grommet.
  - (2) Align the spline of the ignition coil with the spline of the holder, and push in the cord.

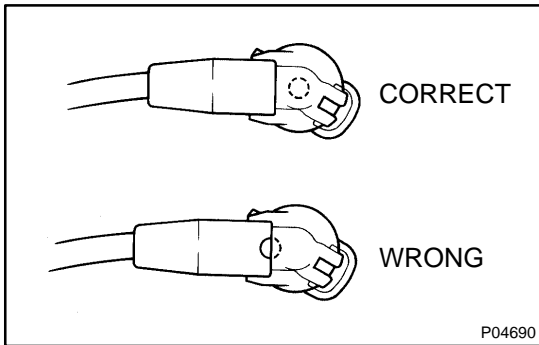

**NOTICE:**


**Check that the holder is correctly installed to the grommet as shown in the illustration.**

- (3) Check that the lock claw of the holder is engaged by lightly pulling the holder.
- (g) Reconnect the high-tension cord set to the spark plugs.
- (h) Reinstall the throttle body gasket (See page IG-9).
- (i) Reinstall the No.3 timing belt cover.

**3. INSPECT SPARK PLUGS**

**NOTICE:**

- **Never use a wire brush for cleaning.**
  - **Never attempt to adjust the electrode gap on used a spark plug.**
- (a) Remove the ignition coils and high-tension cord set assembly (See page IG-7).

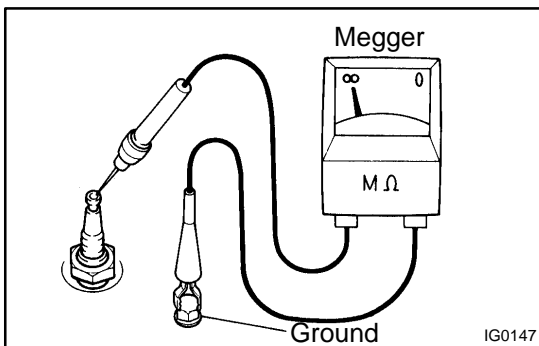


- (b) Inspect the electrode.
  - Using a megger (insulation resistance meter), measure the insulation resistance.

**Standard correct insulation resistance:  
10 MΩ or more**

If the resistance is less than specified, proceed to step (d).

**HINT:**

If a megger is not available, the following simple method of inspection provides fairly accurate results.

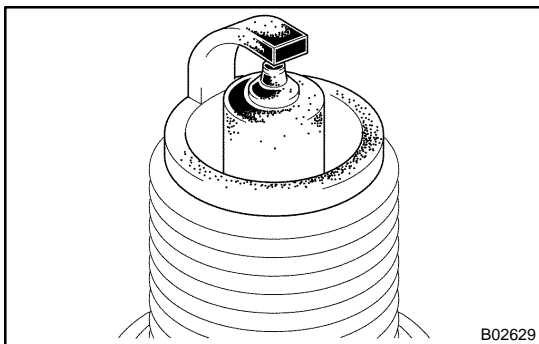


- **Simple Method:**
  - Quickly race the engine 5 times to 4,000 rpm.
  - Remove the spark plug (See step c).
  - Visually check the spark plug.
    - If the electrode is dry ... OK
    - If the electrode is wet ... Proceed to step (d)
  - Reinstall the spark plug (See step g).

- (c) Using a 16 mm plug wrench, remove the 6 spark plugs.
- (d) Visually check the spark plug for thread damage and insulator damage.

If abnormal, replace the spark plug.

**Recommended spark plug:**

DENSO made	SK16R-P11
------------	-----------

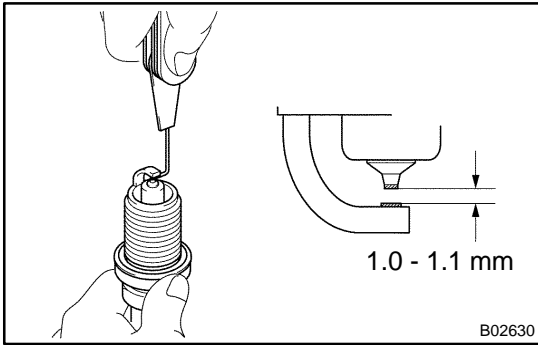

(e) Inspect the electrode gap.

**Maximum electrode gap for used spark plug:  
1.2 mm (0.047 in.)**

If the gap is greater than maximum, replace the spark plug.

**Correct electrode gap for new spark plug:  
1.1 mm (0.043 in.)**

**NOTICE:**

**If adjusting the gap of a new spark plug, bend only the base of the ground electrode. Do not touch the tip. Never attempt to adjust the gap on the used plug.**



(f) Clean the spark plugs.

If the electrode has traces of wet carbon, allow it to dry and then clean with a spark plug cleaner.

**Air pressure: Below 588 kPa (6 kgf/cm<sup>2</sup>, 85 psi)**

**Duration: 20 seconds or less**

**HINT:**

If there are traces of oil, remove it with gasoline before using the spark plug cleaner.


(g) Using a 16 mm plug wrench, reinstall the 6 spark plugs.

**Torque: 18 N·m (180 kgf-cm, 13 ft-lbf)**

(h) Reinstall the ignition coils and high-tension cord set assembly (See page IG-9).

**4. INSPECT IGNITION COILS**

(a) Remove the ignition coil assembly (See page IG-7).

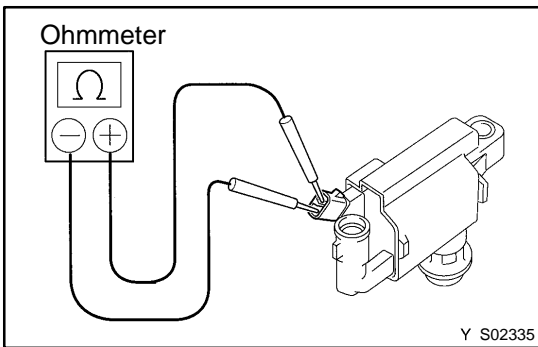


(b) Using an ohmmeter, measure the resistance between the positive (+) and negative (-) terminals.

**Primary coil resistance:**

Cold	0.33 - 0.52 Ω
Hot	0.42 - 0.61 Ω

If the resistance is not as specified, replace the ignition coil.

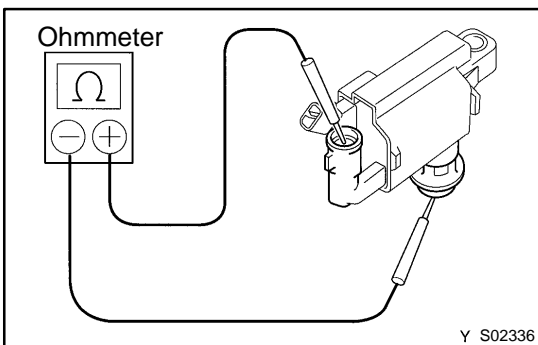


(c) Using an ohmmeter, measure the resistance between the positive (+) and high-tension terminal.

**Secondary coil resistance:**

Cold	8.5 - 14.7 kΩ
Hot	10.8 - 17.2 kΩ

If the resistance is not as specified, replace the ignition coil.

(d) Reinstall the ignition coil assembly (See page IG-9).

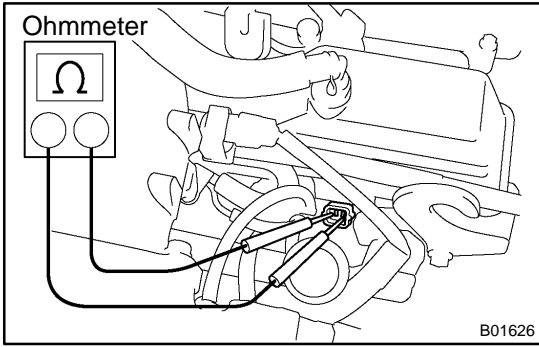

**5. INSPECT CAMSHAFT POSITION SENSOR**


- (a) Disconnect the sensor connector.
- (b) Using an ohmmeter, measure the resistance between terminals.

**Resistance:**

Cold	835 - 1,400 Ω
Hot	1,060 - 1,645 Ω

If the resistance is not as specified, replace the sensor.

- (c) Reconnect the camshaft position sensor connector.

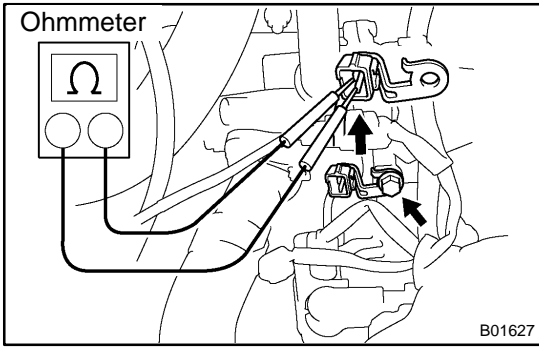

**6. INSPECT CRANKSHAFT POSITION SENSOR**

- (a) Disconnect the sensor connector.
- (b) Remove the bolt holding the connector bracket to the water pump.
- (c) Using an ohmmeter, measure the resistance between terminals.

**Resistance:**


Cold	1,630 - 2,740 Ω
Hot	2,065 - 3,225 Ω

If the resistance is not as specified, replace the sensor.

- (d) Reinstall the bolt holding the connector bracket to the water pump.
- (e) Reconnect the sensor connector.

# IGNITION COIL COMPONENTS

IG05T-08

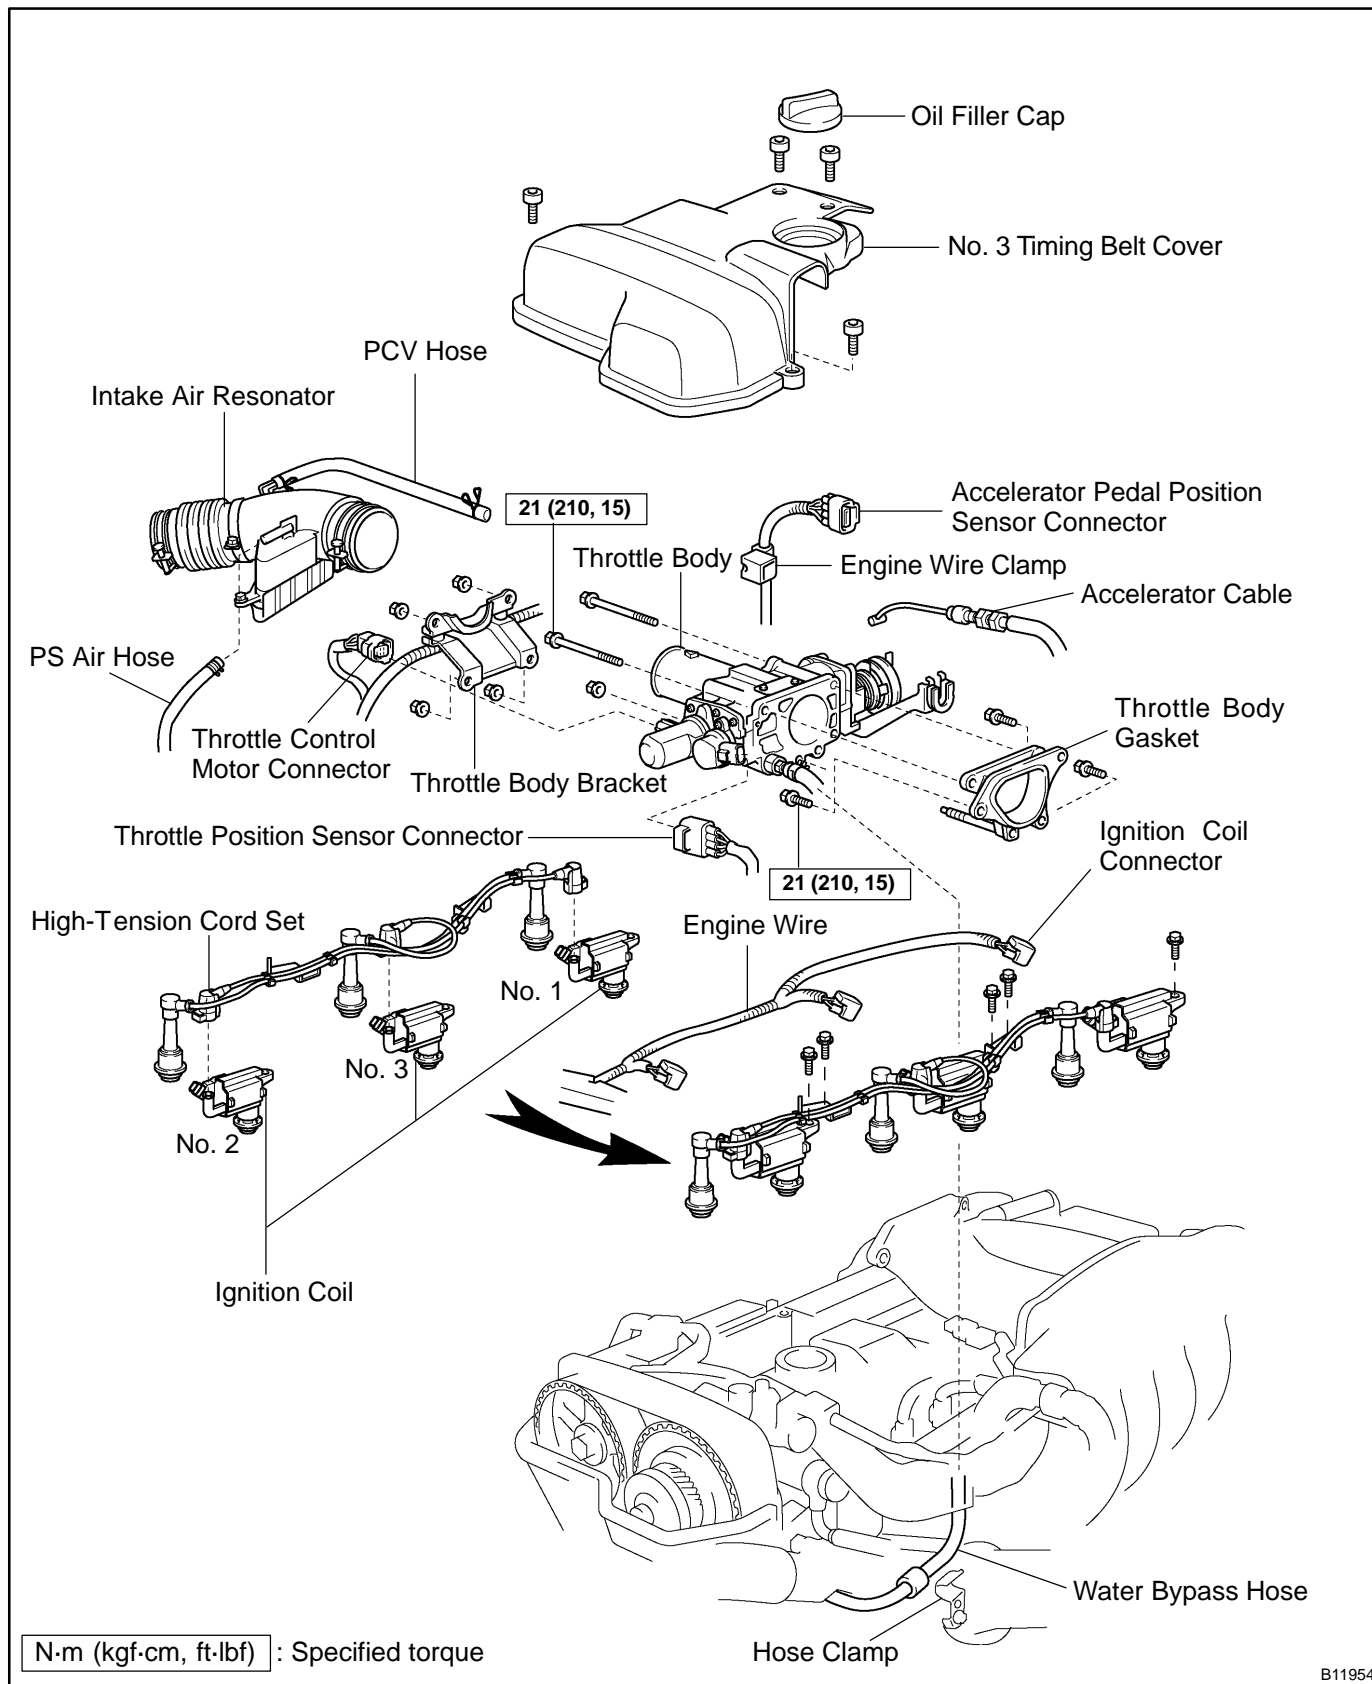


## REMOVAL

1. REMOVE INTAKE AIR RESONATOR
2. REMOVE NO. 3 TIMING BELT COVER

Using a 5 mm hexagon wrench, remove the 4 bolts, oil filler cap and No.3 timing belt cover.

3. DISCONNECT THROTTLE BODY FROM INTAKE AIR CONNECTOR WITHOUT DISCONNECTING WATER BYPASS HOSES

- (a) Disconnect the accelerator cable.
- (b) Disconnect the throttle position sensor connector.
- (c) Disconnect the throttle control motor connector.
- (d) Disconnect the accelerator pedal position sensor connector.
- (e) Disconnect the engine wire clamp from the clamp bracket of the throttle body.

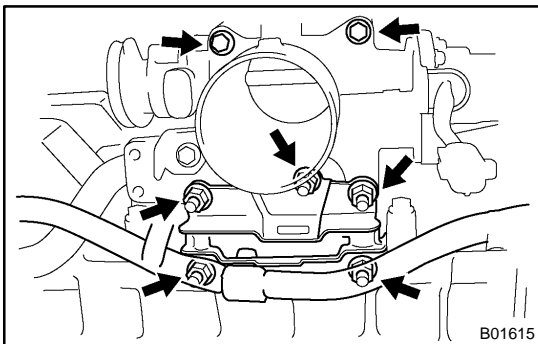


- (f) Remove the 2 bolts and nut holding the throttle body to the intake air connector.

**Torque: 21 N·m (210 kgf-cm, 15 ft-lbf)**


- (g) Remove the 4 nuts and the throttle body bracket.

**Torque: 21 N·m (210 kgf-cm, 15 ft-lbf)**

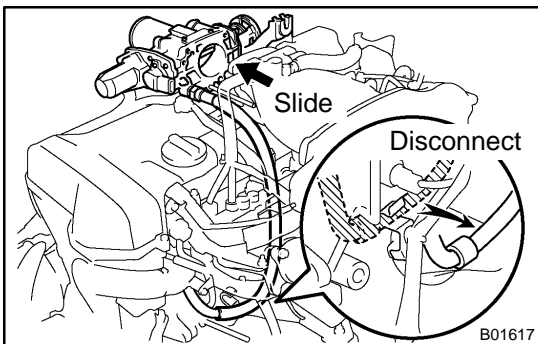

- (h) Disconnect the water bypass hose from the hose clamp on the oil filter bracket.


- (i) Slightly slide the throttle body away from the intake air connector.

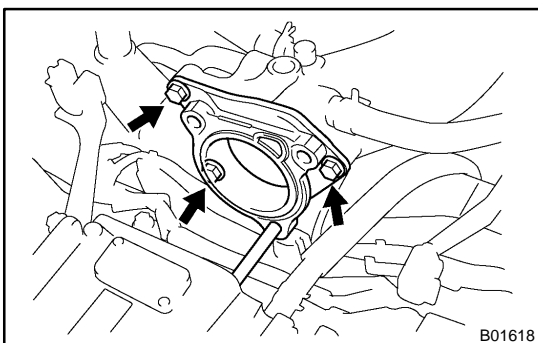

4. REMOVE THROTTLE BODY GASKET


Remove the 3 bolts and throttle body gasket.

**Torque: 21 N·m (210 kgf-cm, 15 ft-lbf)**

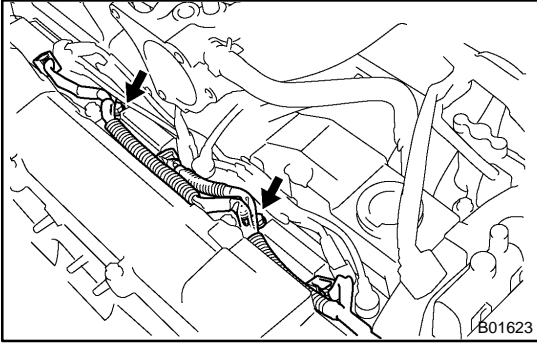


**5. REMOVE IGNITION COILS AND HIGH-TENSION CORDS SET ASSEMBLY**

- (a) Disconnect the 3 connectors from the ignition coils.
- (b) Remove the 2 bolts, and disconnect the clamps from the engine wire.

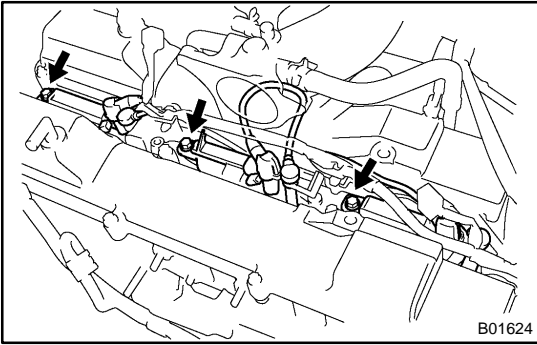

- (c) Remove the 3 bolts, the ignition coils and high-tension cord set assembly.

**Torque: 8.0 N·m (80 kgf·cm, 71 in.-lbf)**

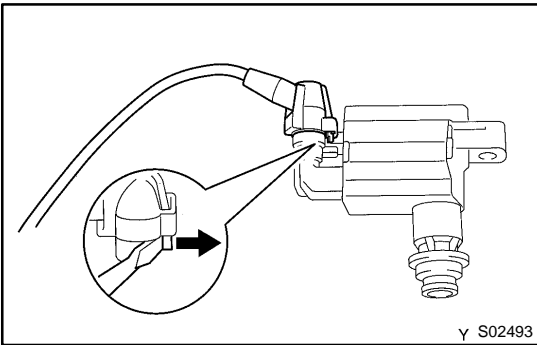

**6. REMOVE IGNITION COILS FROM HIGH-TENSION CORD SET**




## INSTALLATION

Installation is in the reverse order of removal (See page [IG-7](#) ).

# CAMSHAFT POSITION SENSOR COMPONENTS

IG05V-08

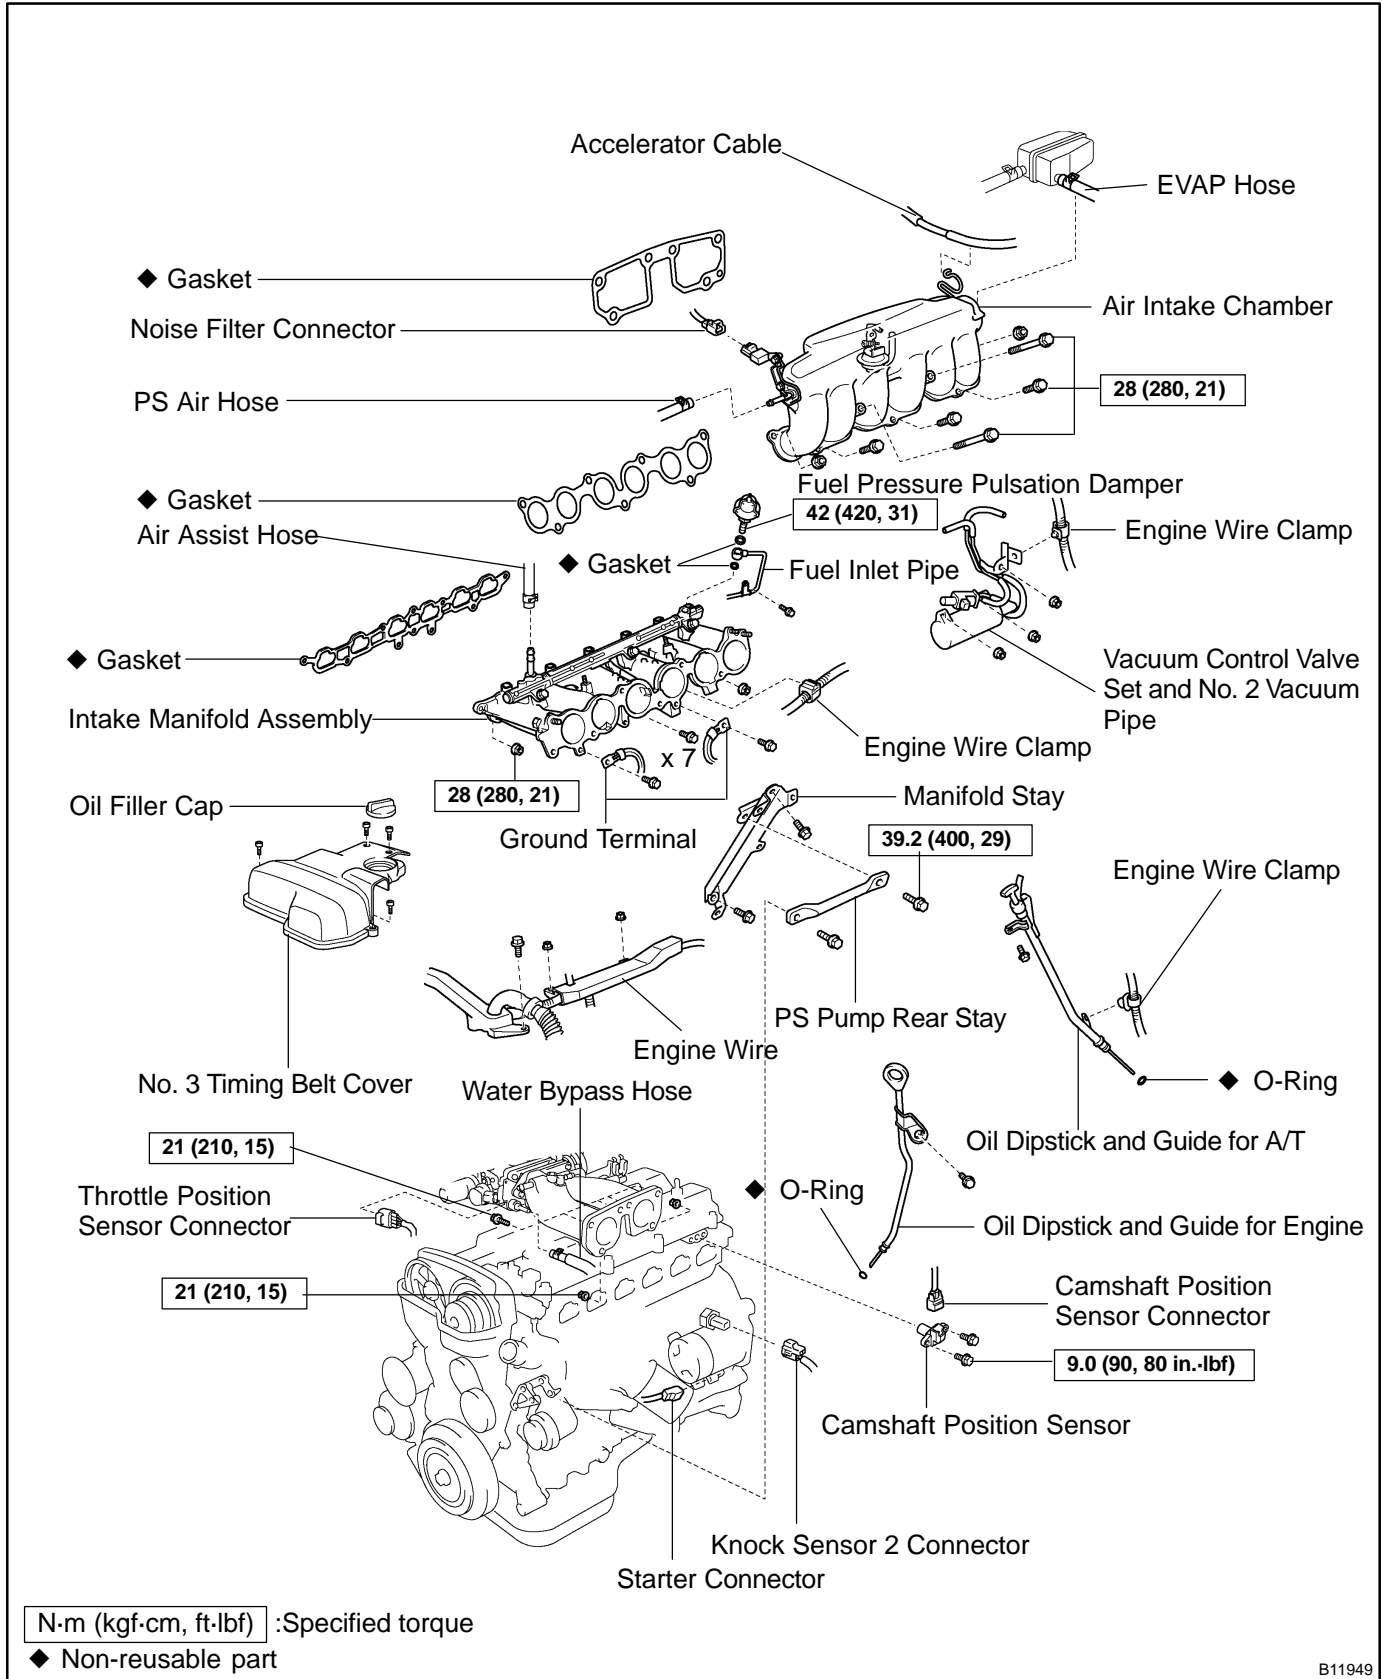

B11949


## REMOVAL

1. DRAIN ENGINE COOLANT
2. REMOVE OIL DIPSTICK AND GUIDE FOR ENGINE (See page [LU-6](#))
3. REMOVE OIL DIPSTICK AND GUIDE FOR A/T (See page [EM-65](#))
4. REMOVE AIR INTAKE CHAMBER (See page [SF-46](#))
5. REMOVE VACUUM CONTROL VALVE SET AND NO. 2 VACUUM PIPE (See page [EM-34](#))
6. REMOVE NO. 3 TIMING BELT COVER
7. DISCONNECT HOSES AND ENGINE WIRE
  - (a) Disconnect the air assist hose from the intake manifold.
  - (b) Disconnect the water bypass hose (from the water outlet) from the throttle body.
  - (c) Disconnect the 2 ground terminals from the intake manifold.

### HINT:

At time of the installation, tighten so that each calking part should inside.

- (d) Disconnect the throttle position sensor connector.
- (e) Disconnect the 6 injector connectors.
- (f) Disconnect the camshaft position sensor connector.
- (g) Disconnect the knock sensor 2 connector.
- (h) Disconnect the starter connector.
- (i) Disconnect the engine wire clamp from the clamp bracket on the intake manifold.
- (j) Remove the 3 nuts, and disconnect the engine wire protector from the intake manifold.
8. REMOVE FUEL PRESSURE PULSATION DAMPER (See page [SF-26](#))
9. REMOVE PS PUMP REAR STAY  
Torque: 39.2 N·m (400 kgf·cm, 29 ft·lbf)
10. REMOVE INTAKE MANIFOLD ASSEMBLY (See page [EM-34](#))

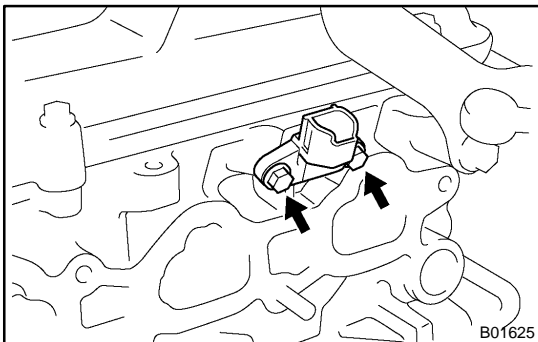

### 11. REMOVE CAMSHAFT POSITION SENSOR

Remove the 2 bolts and sensor.


**Torque: 9.0 N·m (90 kgf·cm, 80 in.-lbf)**

## INSTALLATION

Installation is in the reverse order of removal (See page [IG-1 1](#)).


# CRANKSHAFT POSITION SENSOR COMPONENTS

IG060-09

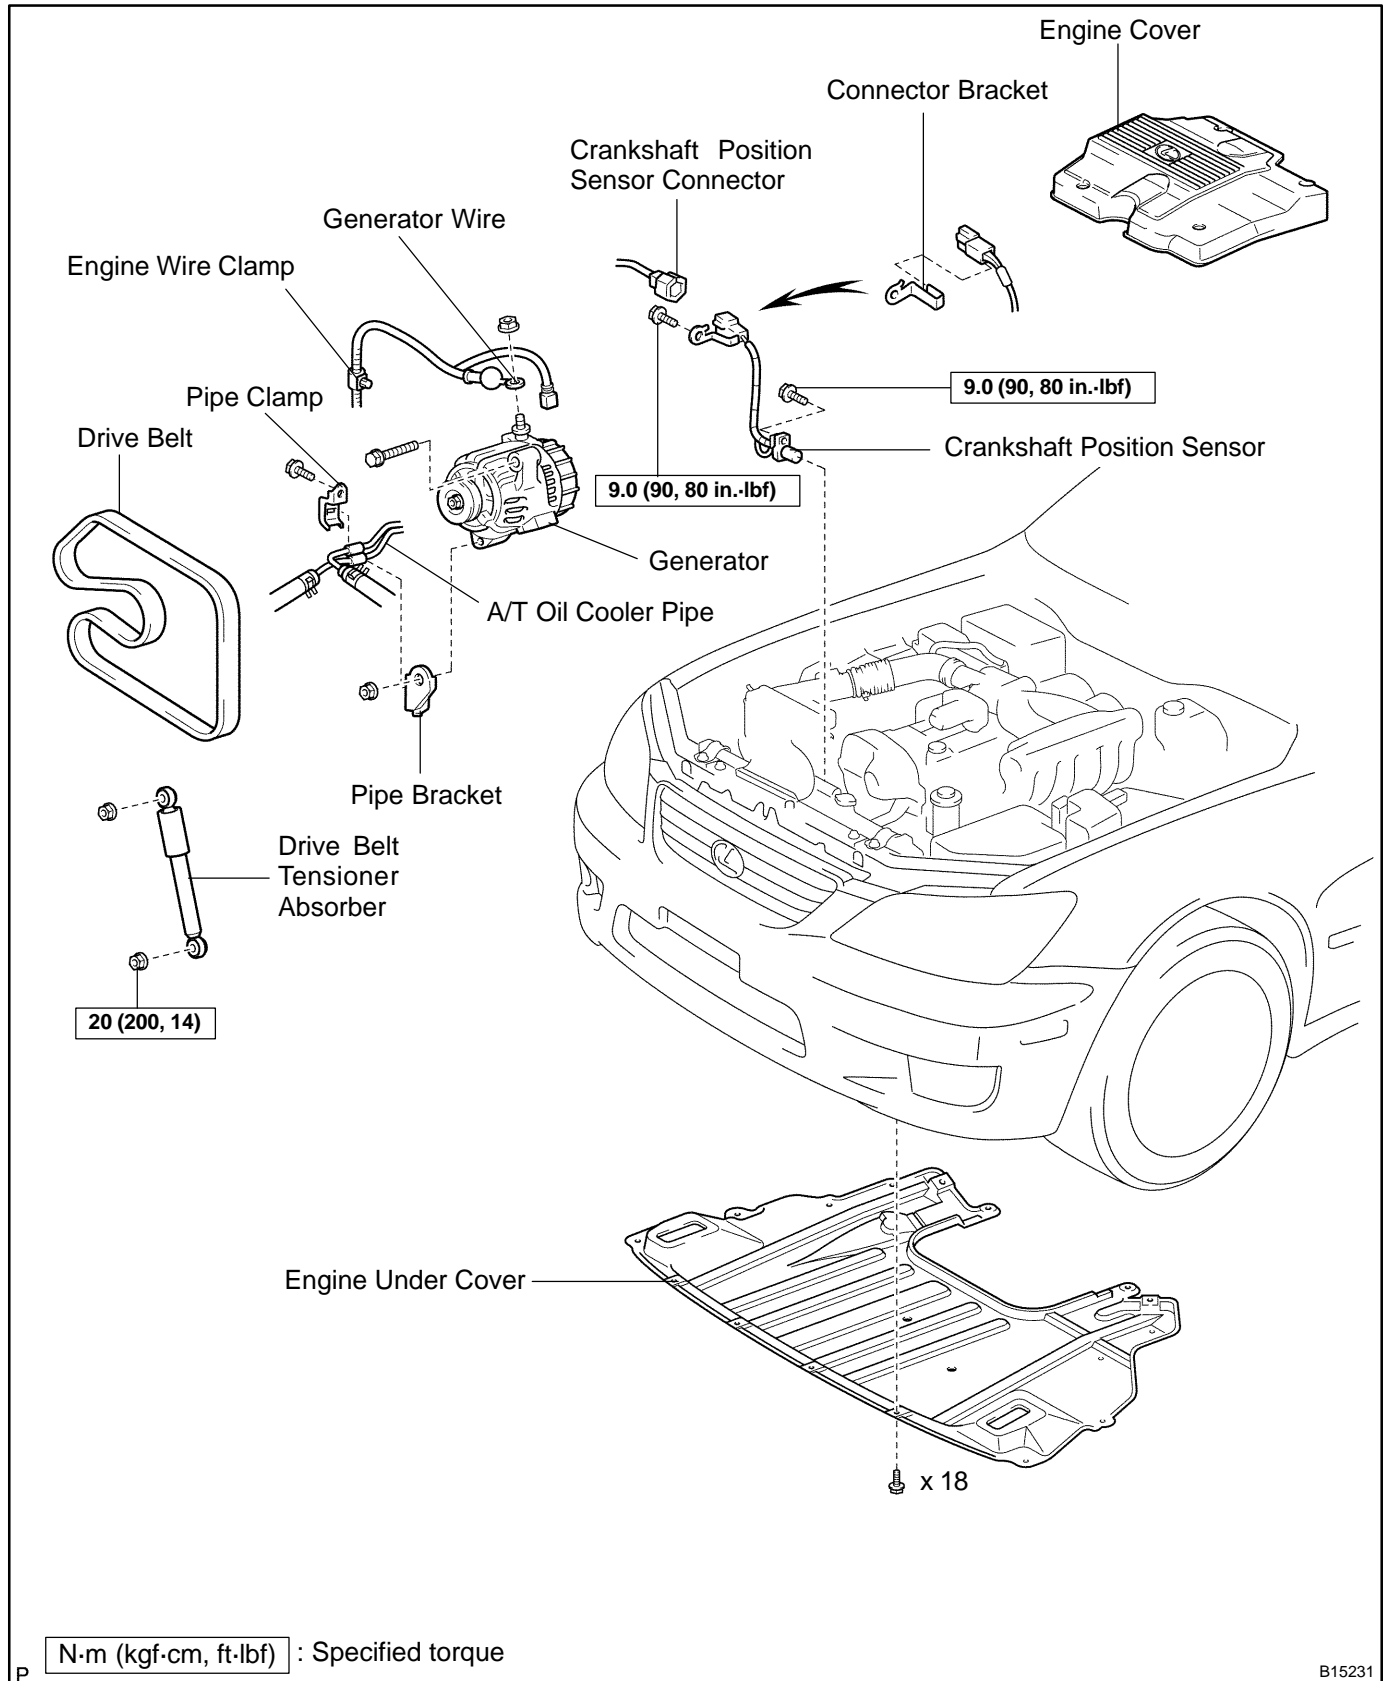

## REMOVAL

1. REMOVE GENERATOR (See page CH-6)
2. DISCONNECT CRANKSHAFT POSITION SENSOR CONNECTOR
  - (a) Disconnect the sensor connector.

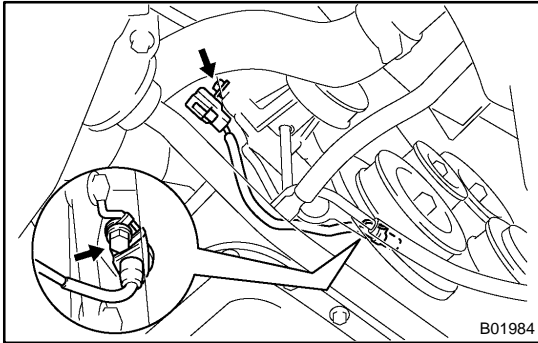

- (b) Remove the bolt holding the connector bracket to the water pump.
3. REMOVE CRANKSHAFT POSITION SENSOR
  - (a) Remove the bolt and sensor.  
**Torque: 9.0 N·m (90 kgf·cm, 80 in.-lbf)**
  - (b) Remove the connector bracket from the connector.

## INSTALLATION

Installation is in the reverse order of removal (See page [IG-14](#) ).